

# hsc ELITE

4. In order to avoid overheating, do not cover the heater
5. Keep the heater a distance of at least 90cm from any combustible material, such as furniture, curtains, bedding, cloth or papers.
6. Do not attempt to open any part of the oil fins.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
9. Keep the heater clean. Do not allow objects to enter the ventilation, as this may cause electric shock, fire or damage the heater.
10. Close supervision is required when any appliance is used near or by child.
11. Never allow the cord to touch wet or hot surfaces, become twisted or within the reach of the child.
12. Do not use outdoors.
13. Do not place on or near a hot gas or electric burner.
14. Never use the appliance use a damaged cord or plug or after the appliance has malfunctioned or been damaged any way.
15. Never attempt to open any part or disassemble the control. Responsibility for failure cannot be accepted if there instruction has been ignored.
16. Do not use the appliance for anything other than its intended use.
17. This appliance is intended for household use only.
18. Regulations concerning the disposal of the oil when scraping the heater have to be followed.
19. Any repairs that need to be done to the heater must be referred to an authorized service agent only.
20. Heater must be not located immediately below a socket outlet.
21. The heater is filled with a precise quantity of special oil. Repairs requiring opening the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is oil leakage.
22. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard



## Manual of Oil Filled Radiator



**RH2000**

### Brief Introduction:

In compliance with the demands for heating appliance in the minimum absorbing the most advanced technology, this oil radiator is meticulous manufactured. It will keep your home office or place of work warm.

### Feature:

1. radiating widely and evenly
2. with over-heating protection to avoid high temperature
3. Two choices for temperature control to satisfy the requirement of different room and temperature.
4. With special heat conducting oil, obtained good effect and without loss.
5. With universal wheels, portable and move freely

### Technical Data:

Model	FIN	Power	Supply	Frequency
RH2000	7	1500W	230V	50Hz
RH2000	9	2000W	230V	50Hz
RH2000	11	2000W	230V	50Hz
RH2000	13	2000W	230V	50Hz

### Installation of Wheels

1. Turn heater upside down, ensuring it is properly supported.
2. Position the wheel base assemblies between the end fins.
3. Attach them to the heater using the U-bolts and wing nuts supplied.
4. Tighten the wing nuts.
5. Turn the heater right way up ensuring it is secure.

### Operation:

1. Place the heater on the floor at least 90cm away from the wall and any other objects such as furniture, curtains or plants. (Make sure the power supply used corresponds to the one on the rating label).
2. With the thermostat switch and power settings switch in the "OFF" position; Plug the heater into the main power supply.

### Using the thermostat switch and the power setting switches:

1. Room temperature can be adjusted using the thermostat. Simply turn the thermostat knob clockwise to increase the heat. And anti-clockwise to decrease the temperature until you reach the desire temperature.
  2. Switch the heater to the one of the following power settings.
    - A) Push switch one( I )600/800W
    - B) Push switch two( II )900/1200W.
    - C) Push switch one( I ) and switch two( II ) heat settings together 1500/2000W.
- Note: This heater is oil filled and will cool slowly after the power is shut off.
- Allow the heater to cool prior to any movement. The built in carry handle should be used for easy movement.
3. The power switch lights up when activated.
  4. Do not cover the heater at any time during operation. There is a risk of fire if the heater is covered.
  5. Once you finished using the heater, turn off the power switches, the thermostat switch to the "0" positions and unplug the main power supply.

### Cleaning:

1. If not using for a long time, please clean its surface and put it into the original packing keep it at airy place and pay attention to avoid dampness
2. Before cleaning, please remove the power plug out of the socket and wait until it is cool enough.
3. Clean it with wet towel with a little detergent if for heavy stain, pay attention not to clean it with such solvents as petrol, toluene, etc.

### Storage

1. Save the box for off season storage.
2. Clean the heater following the cleaning instructions above.
3. Remove the wheel base assemblies.
4. Place the heater, and wheel assemblies in the original box and store in a dry place.

### Attention:

1. Read the instruction carefully before use and keep them for future reference.
2. Always disconnect the heater from the main supply when not in use and when cleaning.
3. Do never leave the heater "ON" unattended.